 
 
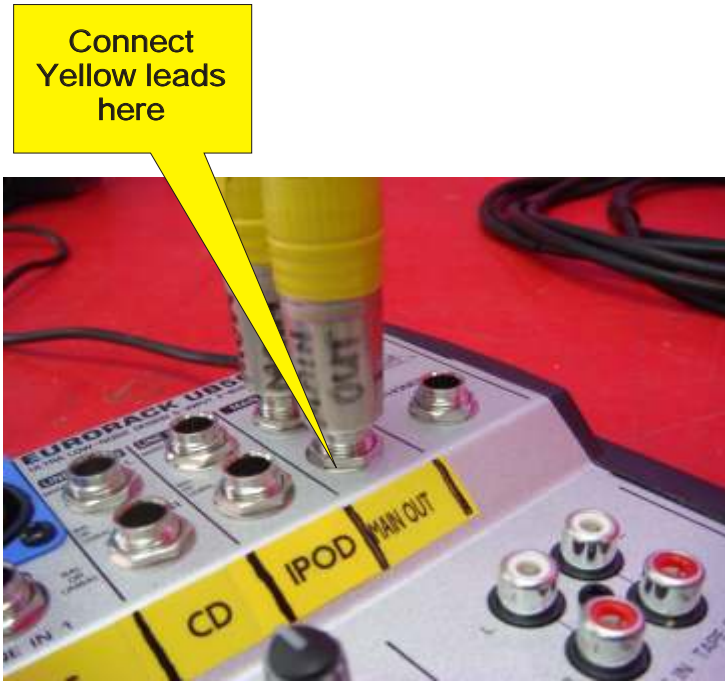 


HIRE 78: UB502 Sound Desk

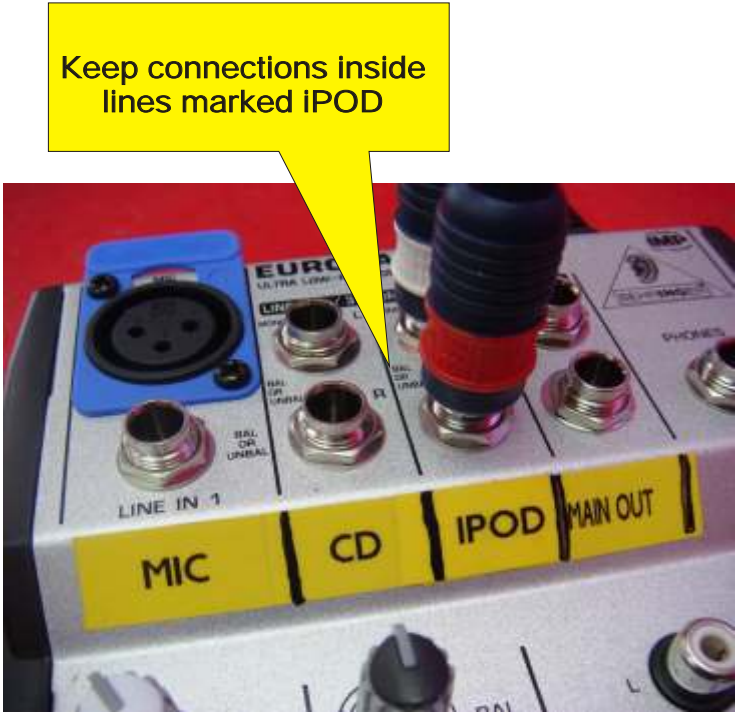

Never unplug ANY leads when the system is in use.

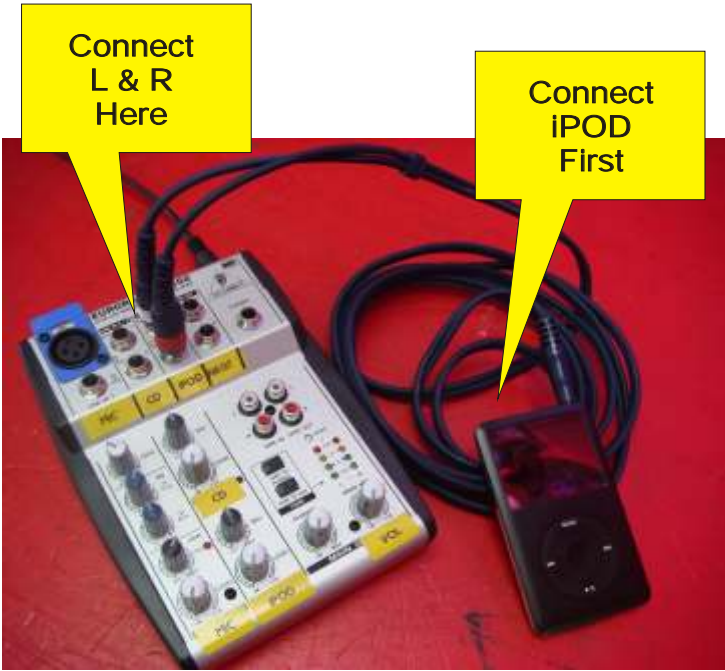

If you want to connect a second iPod or CD Player, then just connect to CD sockets next to IPOD.

NEVER UNPLUG AN IPOD WHEN ITS PLAYING AS THIS CAN DAMAGE THE SOUND SYSTEM !!.